

- 1) Start PC-DMIS and open a program.
- 2) Go to: File \rightarrow Reporting \rightarrow Edit \rightarrow Label Template.
- 3) Choice the file "File_Header.LBL". This is the template used by default in PC-DMIS.
- 4) Make a double click on the header and left click on the logo. The background of the logo comes blue.

Label Template Editor - C:\PCDMIS_V41\reporting\FILE_HEADER.LBL				
	······································			
- - - - -	pc•dmis	=LOADSTR(-4 =PART_NAME	=SYSTEMDATE("MMMM dd, yyyy")	=SYSTEMTIME("HH:mm")
		=LOADSTR(-4 =REVISION	=LOADSTR(=SERIAL_NU	=LOADSTR(-493) =STAT_COU
Ľ.	•••••••••••••••••			

- 5) Make a right click on the logo. The window "Grid properties" is opened.
- 6) On "Cell" in Cell Type, click on "Select".
- 7) Select your new logo.
- 8) Click OK. Your Logo is now introduced on the header.



- 9) Save the new header: File \rightarrow Save As...
- 10) Name your new header file (for example: File_Header_Hex.LBL).
- 11) Close the Label Template Editor.
- 12) Close PC-DMIS.
- 13) Go to the directory PC-DMIS. Open the folder Reporting.
- 14) Erase or rename the file "File_Header.LBL". Select your new file LBL (for example: File_Header_Hex.LBL) and rename it on "File_Header.LBL".

Now PC-DMIS use on the report the new logo.

