

Restoring Factory Settings in Inspire

A Step-by-Step Guide

v.1.0.8.60 or higher





Basic Overview and Execution

The following guide describes how to restore factory settings when you first installed Inspire.

1. Open Inspire and navigate to Edit > Application Settings or use the hot key shortcut (Alt + T)



Interface	Interface Theme: Dark 🗘	
Selection Graphics CAD Units Measurement Default Tolerances Colors GD&T Reporting	Language: English C Language Details Decimal Separator: List Separator: Digit Grouping Separator: Date Format: Automatic Backups Automatically save every: Save no more than: Note: Automatic bao	Default : Default : Default : Default : 5 : iminutes 4 : backups kups will not take effect until the project is first saved.
Restore Defaults	Pop-Up Notifications Warnings: Status: Notifications: Delete All Settings	ОК Сало

- 2. Select **Interface** and towards the bottom you will see an icon that says, **Restore Defaults** and **Delete All Settings**.
 - a. If you select **Restore Defaults**, this will clear anything that has been modified inside the Application Settings such as units or default tolerances.
 - b. If you select **Delete All Settings**, this will prompt for verification of yes or no. If you choose **YES**, it will restart the software reset to the factory settings.

Application Setti	ngs	×
Interface	Interface Theme: Dark 🗘	
Selection	Language: English 🗘	
Graphics	Language Details	
CAD	Decimal Separator: Default 🗘	
Units	List Constant	
Measurement	Delete All Settings X	
Default Toleran	Are you sure you'd like to delete all of your settings files?	
Colors	Confirmation will restart the application	
GD&T		
Reporting	Yes No	
	Note: Automatic backups will not take effect until the project is first saved.	
	Pop-Up Notifications	
	Warnings: 🗸	
	Status: 🗸	
	Notifications: 🗸	
Restore Defaults	Delete All Settings OK Cano	el:

